

# e-kicks™

USER MANUAL Big Bro v2-T9



Thank you for purchasing e-kicks Electric Scooter!

## **SAFETY PRECAUTIONS**

The precautions noted within this guide are intended to instruct you in the safe and correct use of the product and to prevent injuries or damage to yourself, other persons and property. Please read and ensure that you understand them.

## **DISCLAIMER**

While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. We reserve the right to change the specifications of the hardware and software described herein at any time without prior notice.


## **WHAT'S INSIDE THE BOX?**

1. Foldable Electric Scooter
2. User Manual
3. Charger
4. Set of 3 Allen Wrench

## **PARTS OF ELECTRIC SCOOTER**

1. Handles
2. Display Panel
3. On/Off Button
4. Stem
5. Deck
6. Front & Rear Wheels
7. Accelerator
8. Bell
9. Latch
10. Folding Lock
11. Lock
12. Charging Port
13. Front & Rear Brakes
14. Hook
15. Kickstand
16. Head Light
17. Tail Light



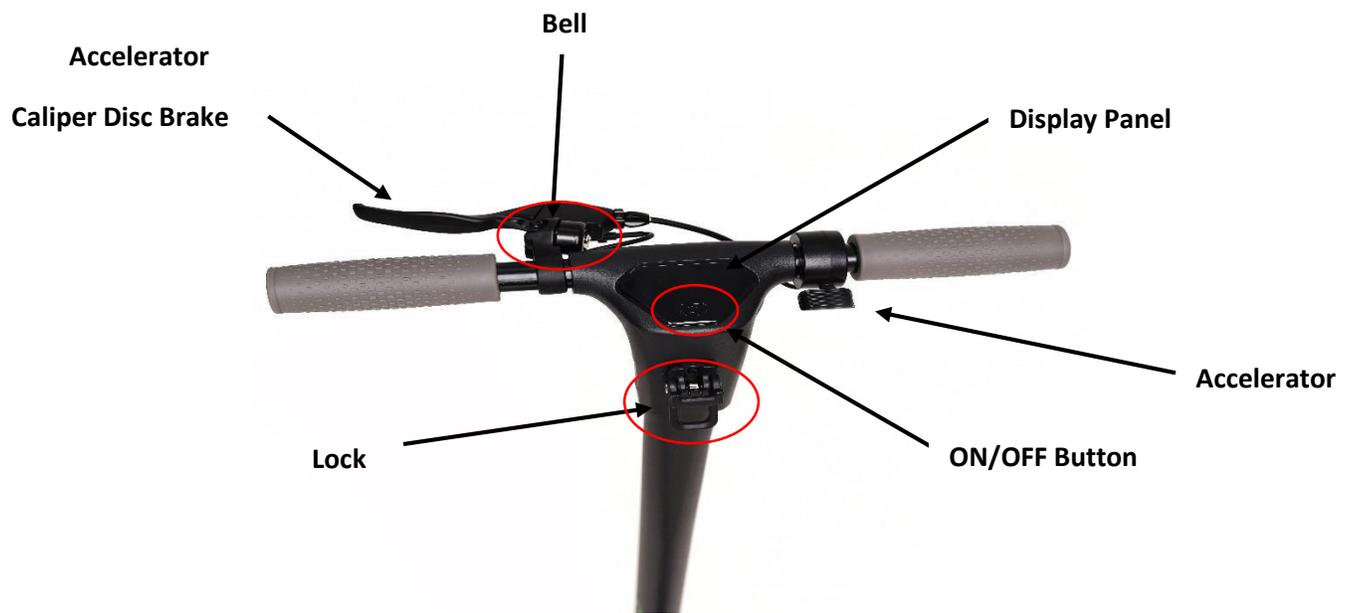

## SETTING UP YOUR SCOOTER



## SETTING UP YOUR ELECTRIC SCOOTER

1. Carefully remove your electric scooter out of box and place on a flat and even surface.
2. Fold out the Kickstand.
3. Detach the Lock from the Hook and pull the Stem all the way up. Hold the Stem in an upright position, locate the Folding Lock at the base of the Stem and push it all the way up until it's secured. Push down the Latch to secure the Folding Lock and make sure it stays in place.
4. Locate the black wire at the top of the stem and connect both green ends.
5. Attach Display Panel in the middle section on top of the stem and tighten the screws with the provided wrench. Make sure the Display Panel is securely attached.



## DISPLAY PANEL

The Display Panel shows Speedometer, Battery Level Indicator, and Speed Mode.

The ON/OFF Button is also located on the Display Panel.



To turn your scooter on, long press the ON/OFF button until the display lights up and blink. Do not release the ON/OFF button until BLUE light stops blinking. Long pressing ON/OFF button again, will turn the electric scooter off.

After the scooter is turned on, the default display shows Speedometer, Battery Level Indicator and Speed Mode.

## SPEEDOMETER, BATTERY LEVEL INDICATOR & SPEED MODE

The **Speedometer** shows current running speed that is measured in km/h.

The **Battery Level Indicator** shows you the charged state of your battery. Charge accordingly if the battery is running low.

**NOTE:** To prolong the life of the battery, plug the Charger first into the electric scooter's charging Port before plugging the charger into your power outlet. Charger light turns RED to indicate the battery is charging.

The **Speed Mode** (S) view shows what speed mode you are running at which is determined by the color of the symbol of Speed Mode (S); there are three modes you can choose from and each with corresponding speed:

Speed Mode (S) = max 12km/h

Speed Mode (S) = max 20km/h

Speed Mode (S) = max 25km/h

To switch Speed Mode (increase or decrease), press the ON/OFF button once.

## HEADLIGHT AND TAIL LIGHT

During night time, make sure to turn in the scooter's headlight.



Double press the ON/OFF button to turn the headlight on, tail light will automatically turn on once the headlight is turned on.

Double pressing the ON/OFF button will turn off the headlight/tail light.

## SAFETY MATTERS BEFORE, DURING & AFTER RIDING

Riders are advised to wear safety gear. At the very least, always wear a helmet, elbow and knee pads for protection.

Children under the age of 14 must be supervised by adults.

Always drive on safe, dry and even surfaces. Don't drive on wet surfaces where water level is 2cm high.

Though electric scooter is normally used for recreation, on certain situations it can be used for mobility as well. In these cases, check with your local community if there are laws governing use of electric scooter. Observe traffic and pedestrian rules and regulations when riding in public places.

Remember **SAFETY FIRST!**

## CARE & STORAGE

The electric scooter is expected to get dirty every so often through its regular use. Turn off the scooter and unplug from charging before cleaning. Wipe with damp clean cloth and at most use mild detergent to remove dirt and stains. Do not use corrosive chemicals and the like. Never use high pressure washers on your electric scooter as this may damage electrical components and will forfeit any existing warranty.

When storing your electric scooter, it's recommended to unfold the electric scooter and store in a cool and dry place.

## AFTERSALES SERVICES & WARRANTY

Purchase of e-kicks Electric Scooter includes a 1-year warranty coverage against any manufacturing defects from the date of purchase. Pre-owned or second-hand scooters are not covered by the warranty. The Limited Warranty does not cover the following parts and conditions:

- Tires
- Cables & Tubes
- Fuses
- Brake Pads
- Normal wear and tear
- Damage arising from improper assembly, maintenance, handling and usage

The Limited Warranty will be automatically cancelled due to the following circumstances:

- Unauthorized modification or maintenance
- Failure to follow operating instructions indicated in the User Manual
- Damage due to accident, abuse, usage other what's intended (transportation and/or recreation)
- Loss or damage caused by nature (e.g. flood, earthquake)
- For any inquiries, send us an e-mail at [support@ekicksph.com](mailto:support@ekicksph.com) or message us direct at our

Facebook Page @ekickselectric scooter.